



(A) Rear brake cam shaft
(A) Rear wheel bearing

(A) Rear spring hanger
(A) Shock absorber connecting link

(F) Differential

(A) Shock absorber connecting link

(A) Rear spring hanger

(A) Rear wheel bearing
(A) Rear brake cam shaft

(A) Drag link
(C) Steering gear
(A) Clutch pedal bearing
(A) Brake pedal bearing
(B) Clutch thrust bearing (remove plate)

(E) Equalizer beam lever (Thru floor boards)
(A) Universal joint
(F) Transmission
(E) Accelerator control shaft

(G) Front wheel
(A) Front steering spindle
(A) Spindle conn. rod

(E) Distributor shaft
(D) Distributor cam (remove Distributor cap)
Spindle conn. rod

(A) Front steering spindle
(G) Front wheel

(A) Front brake shaft
(A) Drag link
(A) Front spring hanger
(A) Shock abs conn. link

(E) Engine Oil pan (Change Oil every 500 miles)

(A) Fan
(A) Water pump
(A) Shock abs conn link
(A) Front spring hanger
(A) Front brake shaft

- (A) Grease every 500 miles (pressure gun)
- (B) Grease every 2000 miles (pressure gun)
- (C) Ford Special steering gear lubricant every 2000 miles (Do not use grease)

- (D) Clean and apply light film of vasoline every 2000 miles
- (E) Oil every 500 miles
- (F) Gear lubricant every 5000 miles
- (G) Pack with grease—every 5000 miles